

The DZ-2001 RED LED should always be dark except when the SW buttons are pressed on the remote control. Other button will also cause DZ-2001 LED to flash.

It sounds like one or more DZ-2500's are in (2) two wire mode. This can be determined if the switch machine has both RED and GREEN "ON" together for the first two seconds at power up. If this is the case, then starting with the RED LED lighted, press and hold the button on top of the DZ-2500 until the RED and GREEN lights flash alternately. As soon as they do, release the push button. Then, turn off power. When power is turned on again everything should be fine. You may need to disconnect the BLUE wire to do this and then re-connect it.