

DZ-1000 issues

The problem is usually the LEDs are plugged in backwards. The LED lights are diodes and have an orientation. At the base of the colored plastic there is a rim with a flat near one of the wires. That flat must match the flat on the housing when it is re-inserted.

The wiring **MUST** also be "R" to "R" and "L" to "L" from the switch machine to the remote pushbutton.